



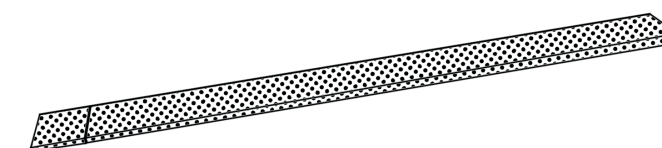
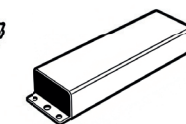


Installation instructions


NIX – BATH POCKET
CORNER INSTALLATION

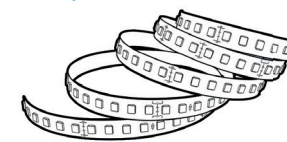


72461 – 160 cm
72462 – 170 cm
72463 – 180 cm

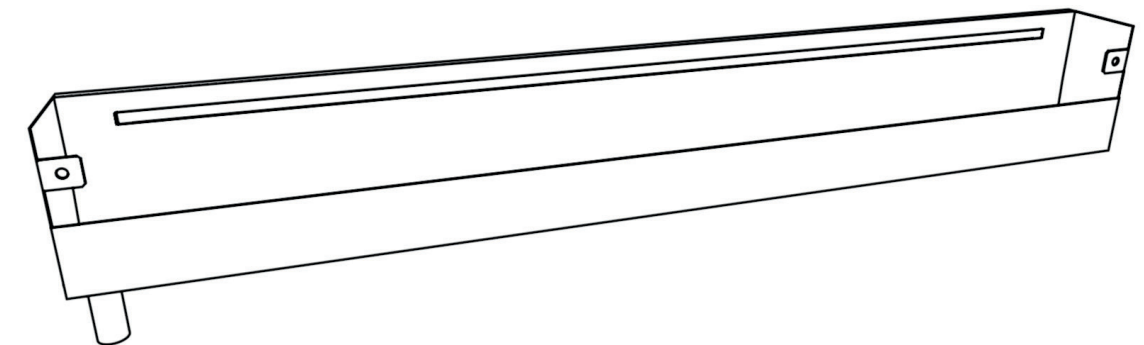

1

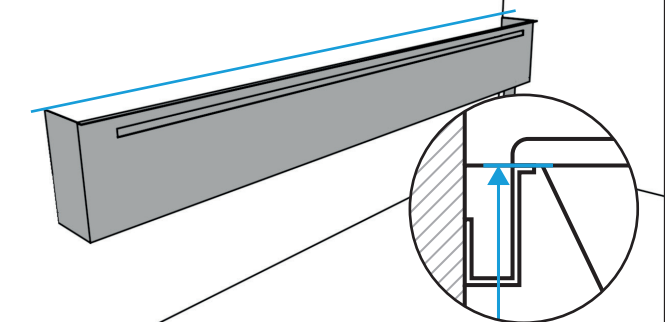

2

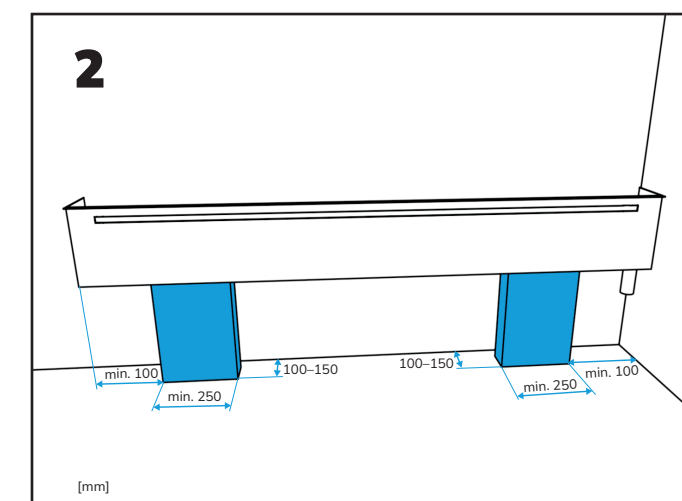

3

